



## **Parts**

T8


T10

T11

Front Bearing

**Pressure Spring** 

Shaft Ring

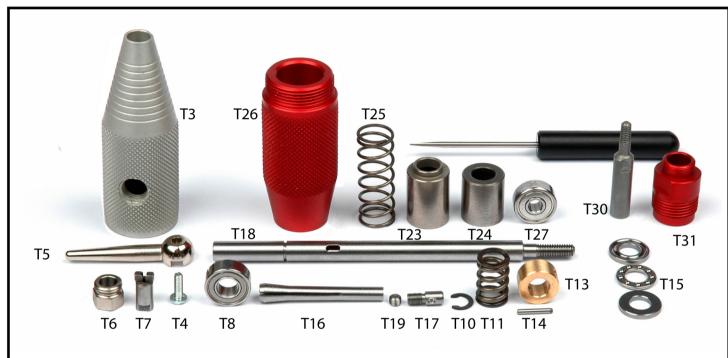

## Connections



Duplex Spring Adaptator

T30 Duplex Drive

T31 Duplex Connection



US QD Connection

T29 QD Connection

T28 US Drive



Colet Screw

Operating Sleeve

Shaft

T18

T19

T23



European Connection

T33 European Connection

T32 European Drive

info@asic-sa.com www.asic-sa.com